

# Profile EXPERT

# CT-DECT Multi M7

for use as base device or standard device with extended setting options

## Operating manual

Software-Package: S-MULTI-02-004  
ProfilSet: PSET-MULTI-STD-001  
Profil: P-MULTI-EXP-001

# Contents

- 1 Safety notices..... 6
- 2 Introduction ..... 7
- 3 Usage..... 9
  - 3.1 Application: independent DECT group..... 10
  - 3.2 Application: BaseSelect - Switching between several groups..... 11
- 4 Operation ..... 12
  - 4.1 Operating elements..... 12
  - 4.2 Connectors..... 15
    - 4.2.1 Connecting..... 15
    - 4.2.2 Disconnecting ..... 16
  - 4.3 Power on ..... 17
  - 4.4 Switching off the device ..... 17
  - 4.5 Muting the microphone..... 17
    - 4.5.1 Visual microphone status indicator (status LED) ..... 17
  - 4.6 Earpiece volume ..... 18
  - 4.7 PTT function..... 19
  - 4.8 Menu control ..... 21
  - 4.9 Quick access menu..... 22
- 5 Changing the profile..... 23
- 6 Menu ..... 25
- 7 Subscribing DECT..... 26
  - 7.1 Subscribing consecutively..... 28
  - 7.2 Maximum group size ..... 28
- 8 BaseSelect..... 29
  - 8.1 Selecting the number of base devices ..... 31
  - 8.2 Selecting the base device ..... 32

|        |                                                       |    |
|--------|-------------------------------------------------------|----|
| 8.2.1  | Selecting the base device via the menu .....          | 32 |
| 8.2.2  | Selecting the base device via shortcut.....           | 32 |
| 9      | CT-WirelessPTT MIL.....                               | 34 |
| 9.1    | Controls.....                                         | 34 |
| 9.2    | Switching on the WirelessPTT function.....            | 35 |
| 9.3    | Pairing .....                                         | 36 |
| 9.4    | Delete pairings .....                                 | 36 |
| 10     | Bluetooth® connection .....                           | 37 |
| 10.1   | Selecting a Bluetooth® device type .....              | 38 |
| 10.2   | Connecting a Bluetooth® device (pairing) .....        | 39 |
| 10.3   | Phone call control.....                               | 40 |
| 10.3.1 | Answering an incoming call .....                      | 40 |
| 10.3.2 | Rejecting an incoming call .....                      | 40 |
| 10.3.3 | Ending an existing call .....                         | 41 |
| 10.3.4 | Activating automatic call acceptance .....            | 41 |
| 10.3.5 | Initiating a conference call .....                    | 42 |
| 10.3.6 | Ending a conference call.....                         | 42 |
| 11     | ASR-Control (Ambient Sound Reception).....            | 43 |
| 11.1   | Compatible products .....                             | 43 |
| 11.2   | ASR in combination with CT-ClipCom Digital .....      | 44 |
| 11.3   | ASR in combination with 3M™ PELTOR™ ComTac™ VIII..... | 45 |
| 12     | Sidetone (S/T).....                                   | 46 |
| 13     | DNR .....                                             | 47 |
| 14     | MonoMix.....                                          | 48 |
| 15     | LED indication .....                                  | 52 |
| 16     | SIG - Signalling .....                                | 53 |
| 17     | Internal power supply .....                           | 54 |
| 17.1   | Using AAA adapters.....                               | 54 |

|      |                                                    |    |
|------|----------------------------------------------------|----|
| 17.2 | Changing the batteries / AAA adapters .....        | 56 |
| 17.3 | Runtime .....                                      | 57 |
| 17.4 | Battery level monitoring .....                     | 58 |
| 17.5 | Visual battery status indicator (status LED) ..... | 59 |
| 17.6 | Acoustic battery warning .....                     | 59 |
| 17.7 | Automatic shutdown in case of undervoltage .....   | 60 |
| 18   | Accessories .....                                  | 61 |
| 19   | Maintenance and care .....                         | 62 |
| 19.1 | Inspecting devices .....                           | 62 |
| 19.2 | Cleaning .....                                     | 62 |
| 20   | Labelling .....                                    | 63 |
| 21   | Abbreviations and terms .....                      | 64 |



# 1 Safety notices

## **DANGER**

Immediate hazardous situation. Results in death or serious injury.

## **WARNING**

Potentially hazardous situation. May result in death or serious injury.

## **CAUTION**

Potentially hazardous situation with minor or moderate injury.

## **NOTICE**

Indicates a situation that, if not avoided, may cause damage to the product or other property. Used to indicate useful information for efficient and safe use of the product.

### *Legal notice for operation in the European Union*

The transmitter of the CT-DECT device may only be used in the European Union when it has the following label:




## 2 Introduction

The CT-DECT Multi M7 is a mobile communication device based on DECT radio technology. It enables the user to connect wirelessly to other users in a DECT group.

All participants can talk to each other in full duplex. This means that they can communicate hands-free without pressing a button.

The CT-DECT Multi M7 is used together with a headset.


Wired CEOTRONICS headsets can be connected as well as wireless headsets (via Bluetooth®).

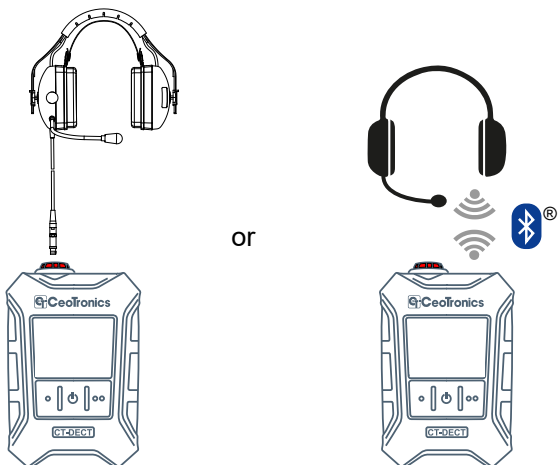


A DECT group always includes a base device, also known as a FixPart (FP), and at least one standard device, also known as a PortablePart (PP).

CT-DECT Multi M7 or CT-DECT Case M7 can be used as the base device.

**DECT group with CT-DECT Multi M7**

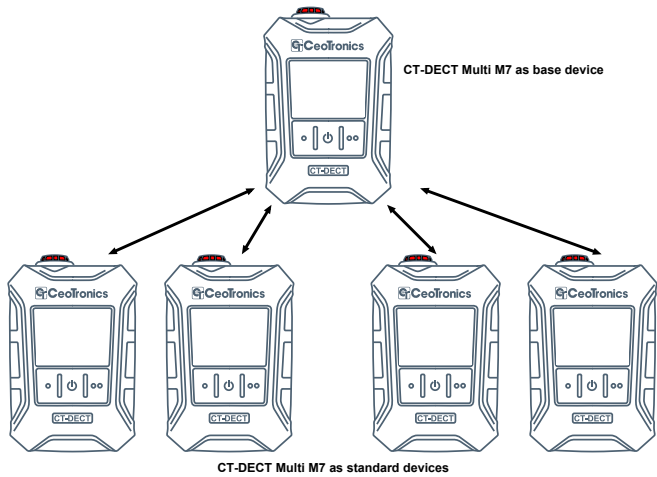

**DECT group with CT-DECT Case M7 and CT-DECT Multi M7**

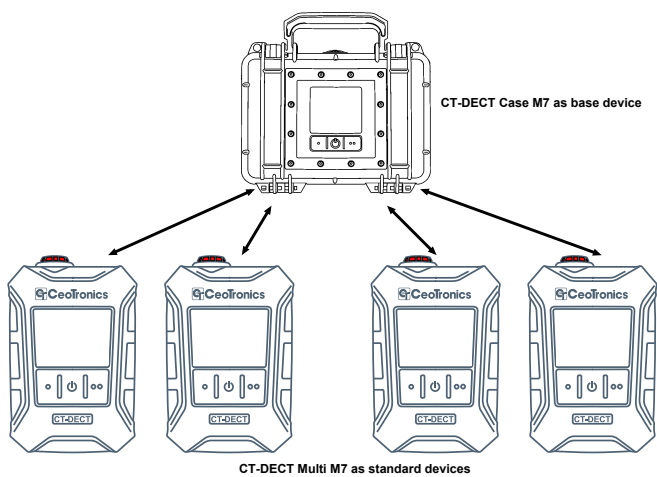

Depending on the software it is equipped with, the CT-DECT Multi M7 offers various profiles made for different use cases and roles.

## 3 Usage

The CT-DECT Multi M7 can be used in various application scenarios. Different software profiles can be selected for this purpose.

Only the EXPERT profile is described here.

For information on the use of other profiles, please refer to the corresponding operating manual.

### 3.1 Application: independent DECT group


In this scenario, a DECT group with up to five CT-DECT Multi M7s is set up.

One of the devices must be set as the base device of the group. To do this, it must work with either the BASE or the EXPERT profile. If the EXPERT profile is selected, it must also be assigned the 'FP' role.

The remaining devices in the DECT group are subscribed on that device and must be set as standard devices. To do this, they must work with either the STANDARD or the EXPERT profile. If the EXPERT profile is selected, the devices concerned must also be assigned the 'PP' role.

The following shows an example configuration in which the base device works with the EXPERT profile and assumes the FP role. The 4 standard devices all work with the STANDARD profile and therefore automatically assume the PP role:

**PROFILE** = required profile

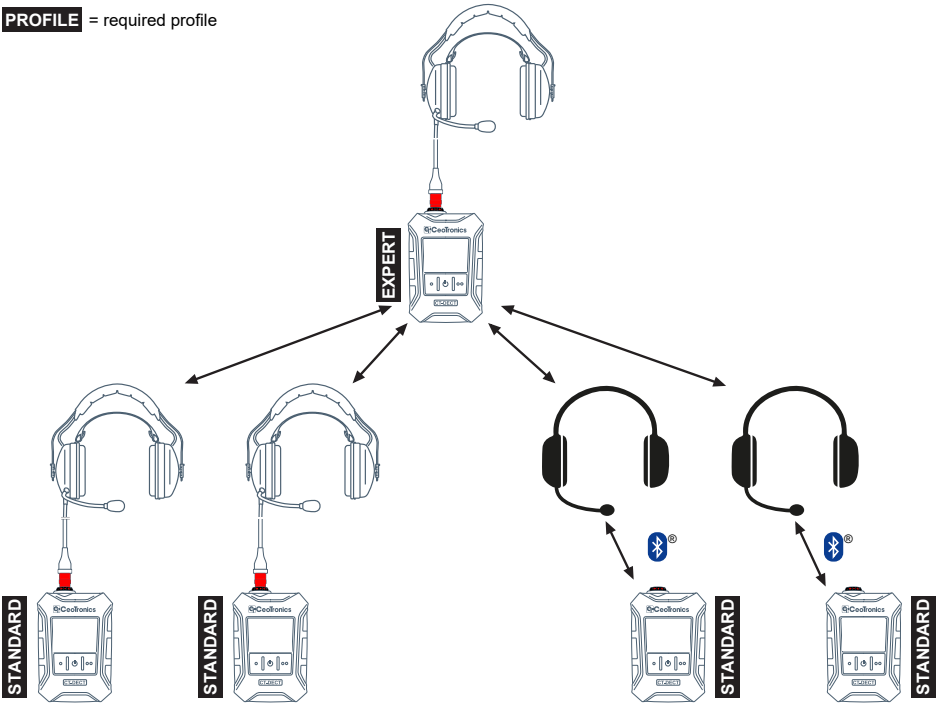


## 3.2 Application: BaseSelect - Switching between several groups

In this scenario, up to 5 DECT groups are set up with up to five CT-DECT Multi M7s each.

Using the BaseSelect function, individual participants who are already subscribed can switch between groups without having to subscribe again on the target group's base device (see BaseSelect [► 29]).

# 4 Operation


## 4.1 Operating elements

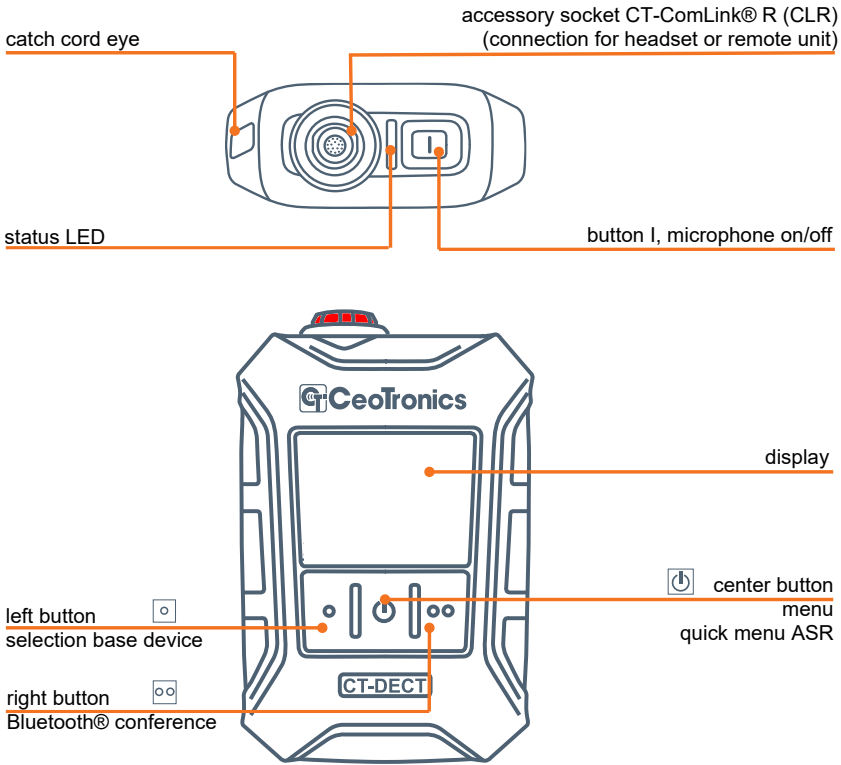

button II  
volume +


button III  
volume -


button IIII  
PTT

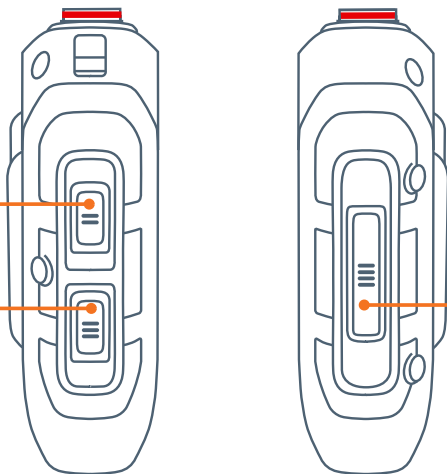

battery compartment

removable  
retaining clip

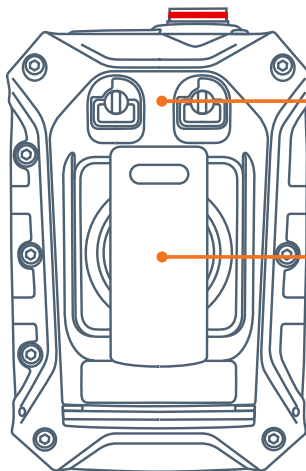

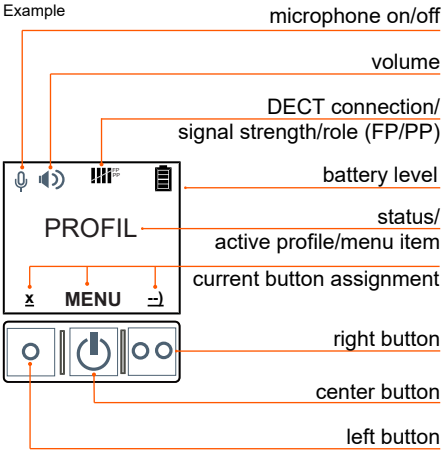


Only displayed  
if headset connected.

## 4.2 Connectors

Ensure careful handling of the plug connectors.


### 4.2.1 Connecting

#### Step 1

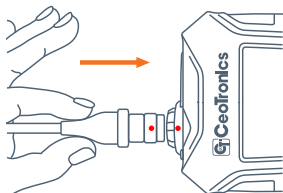


Place the plug on the socket. Make sure that the red dots on the plug and socket match.

#### Step 2

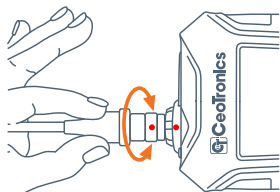

Carefully turn the plug on the socket until it slightly slides into the socket.


#### Step 3

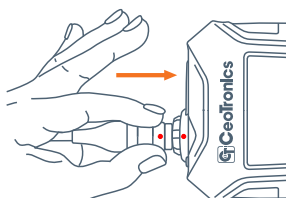

Press the plug into the socket until you feel it click into place.

## 4.2.2 Disconnecting




To release the plug grip it as close as possible to the socket:

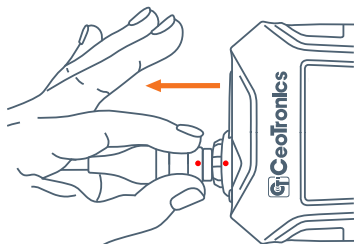

Avoid movements as shown in the following illustrations.

### NOTICE

Improper handling can damage the connector. The locked connector may neither be twisted nor bent. Never pull on the cable to disconnect the connector.

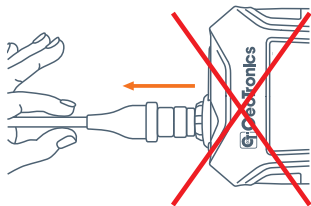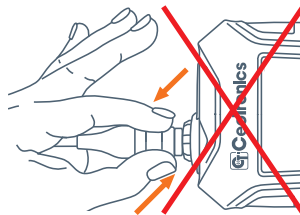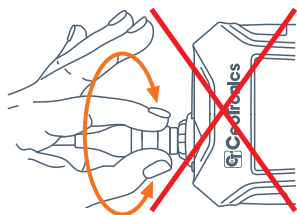

### 4.3 Power on



Press the center button until the display is active. The currently set profile appears on the display.

### 4.4 Switching off the device




Press and hold the center button until SHUTDOWN appears on the display - press again to confirm.

### 4.5 Muting the microphone

By default, the microphone of a connected headset is permanently active/open. This means that other users in the DECT group can always hear you.

If you do not want to be heard all the time, you can mute the microphone.

To mute the microphone of the connected headset, press button I.

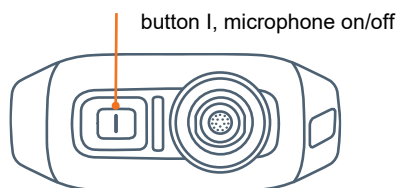

display information:

microphone off




microphone on



#### 4.5.1 Visual microphone status indicator (status LED)

The current microphone status can be displayed via the status LED. To do this, the corresponding function of the status LED must be set (see LED indication [► 52]).

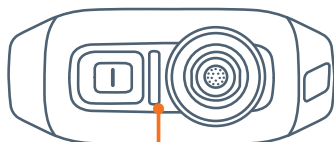

status LED




Microphone ON



Microphone OFF

# 4.6 Earpiece volume

There are 6 volume levels available. They can be selected using buttons II (volume +) and III (volume -). The display shows the volume levels in steps of two. The earpiece volume can be set to the 'off' by holding down button III (volume -) for a longer period of time.

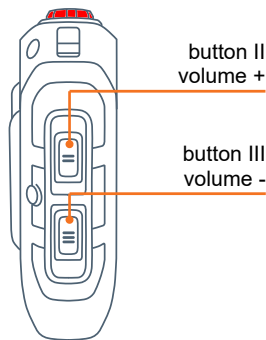

display information:




## 4.7 PTT function

The PTT button allows you to activate the PTT function of a radio device that is connected to the DECT group.


### NOTICE

A CT-DECT Multi M7 operation with the EXPERT profile can only use the PTT function of the button if it is used as a standard device (DECT role PP).

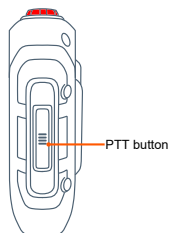

The connection is established, for example, via a CT-DECT Case M7:

**PROFILE** = required profile

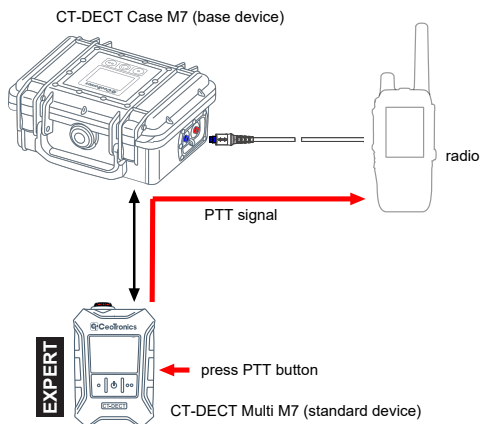

As long as the PTT button is pressed, the user can speak into the radio circuit. Meanwhile, the user continues to hear the DECT group.

## NOTICE

If the microphone of the CT-DECT Multi M7 is muted, the PTT function can still be activated. As long as the PTT button remains pressed, the microphone mute function is cancelled.


## NOTICE

The behavior of the communication between the DECT group and the radio is strongly dependent on the configuration of the CT-DECT Case M7. See the operating manual of the CT-DECT Case M7 for further information.

# 4.8 Menu control



## Enter menu


Press and hold the center button for 2 seconds to enter the menu.

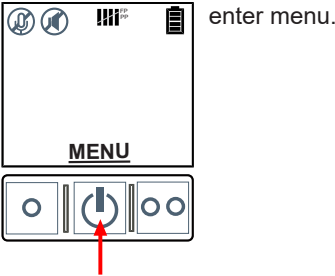

## Navigation

Use the three available buttons to navigate through the menu. The corresponding function of the buttons is shown above it on the display.

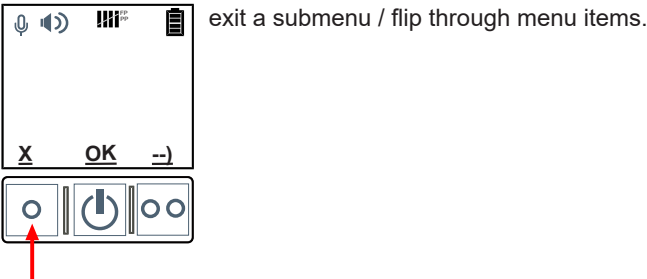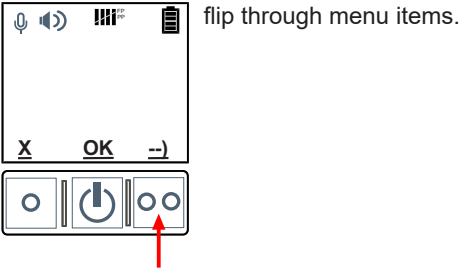

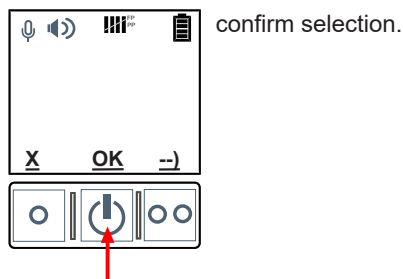


## 4.9 Quick access menu

The CT-DECT Multi M7 has a quick access menu that allows quick access to certain functions of the device depending on the connected hardware.

This menu is only active if a headset is connected to the accessory socket and/or if a headset is connected to the CT-DECT Multi M7 via Bluetooth®.

To access the quick access menu, briefly press the center button once on the home screen.


To flip through the menu items of the quick access menu, briefly press the center button repeatedly.

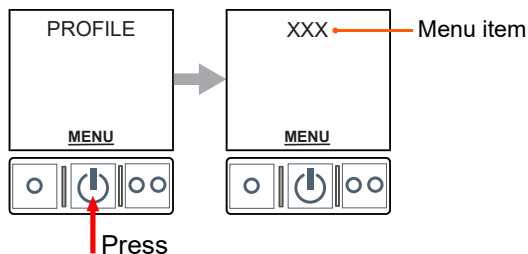


## 5 Changing the profile

If the wrong profile is set, you can change it as follows:

### 1. Power off

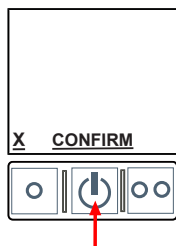


- press and hold the center button until SHUTDOWN appears on the display.

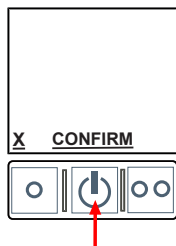


- press the center button one more time to confirm.

### 2. Switch on the device and start profile selection

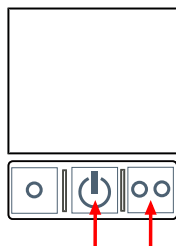


- press and hold the center button and the left button simultaneously until PROFILE appears on the display.

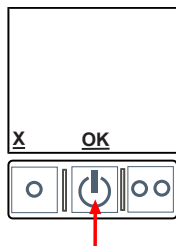


- press the center button one more time to confirm.

### 3. Select a profile

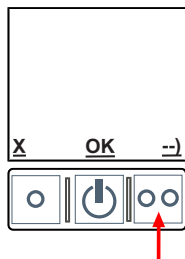


- use the right button to flip to the desired profile.

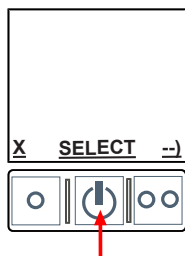

- press the center button to confirm your selection.

### 4. Confirm the profile change

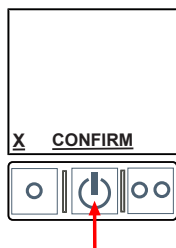


- press the center button one more time to confirm the change.

## NOTICE

The device will then restart. All settings are reset.  
After a profile change, all previously subscribed CT-DECT Multis M7 must subscribe again.

# 6 Menu

The following diagram shows all menu items available in EXPERT profile. Highlighted menu items are only available under certain conditions (see legend).

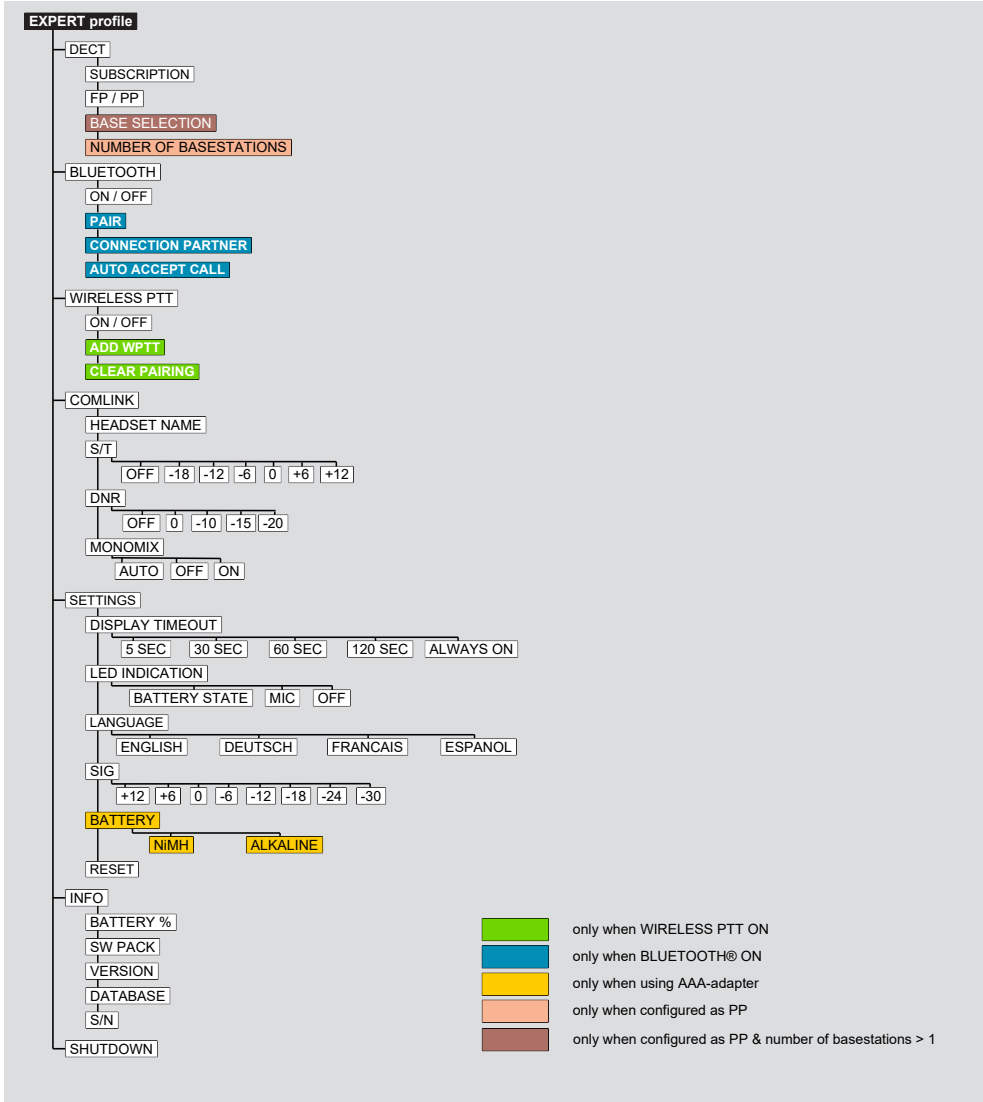


# 7 Subscribing DECT


## Setting the DECT role

In the EXPERT profile, you can switch between the DECT roles FP and PP. This is necessary to use the device as a base device (FP) or standard device (PP).

To do this, use the FP PP menu item:

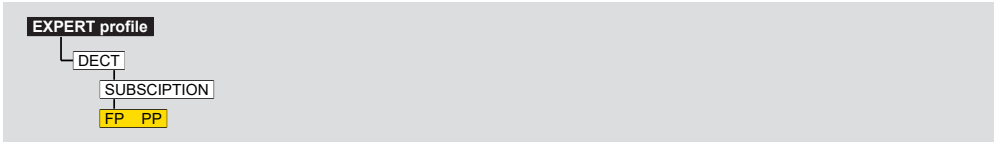

Perform the steps quickly one after the other to avoid a timeout.

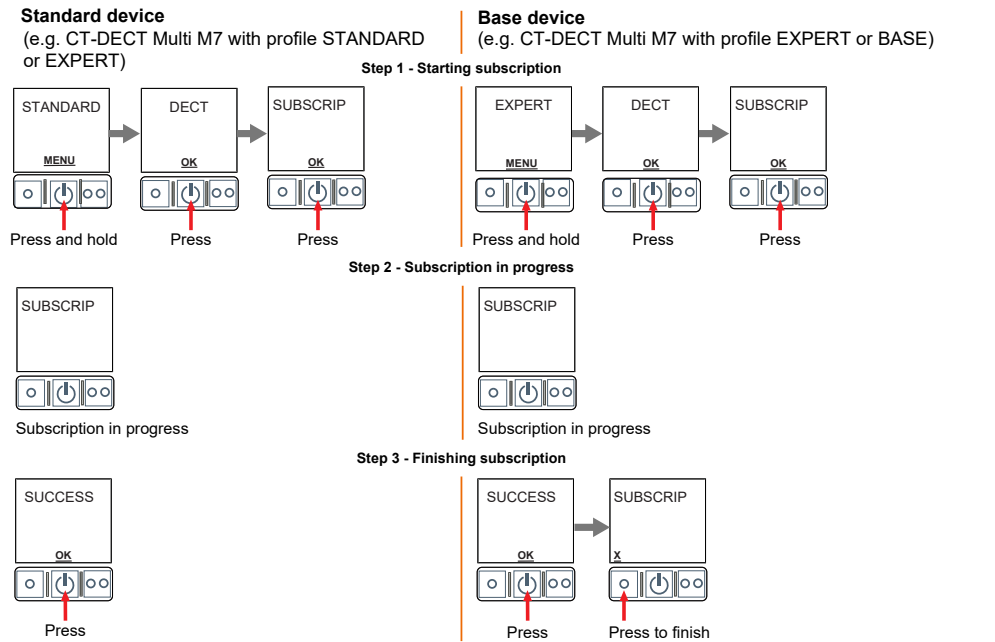

If you want another device to subscribe to the DECT group directly afterwards, see Subscribing consecutively [ 28].

## NOTICE

Do not switch off already subscribed devices while a subscription process is still running. A switched off device can be overwritten during a new subscription process.

If it is unclear which and/or how many devices have already been subscribed, we recommend deleting all devices subscribed to the base unit via the **SETTINGS - RESET** menu and restarting the subscription process for all desired devices.

## NOTICE

If you want to subscribe several standard devices (PP) to one base device (FP), make sure you only subscribe one device at a time. Do not try to subscribe several devices at the same time.

## 7.1 Subscribing consecutively

After a successful subscription, further CT-DECT devices can subscribe immediately.

After successful subscription the display in the CT-DECT Case M7 returns to the SUBSCRIPTION menu item ; step 1 on the base station has already been completed and can be skipped.

Continue with step 2 for the next standard device.

## 7.2 Maximum group size

If a CT-DECT Multi M7 is used as the base device, you can subscribe up to 4 standard devices.

When attempting to subscribe a fifth standard device while all subscribed devices are switched on, the message CONNECTED appears in the base device.

If a fifth standard device is subscribed while a standard device that has already been subscribed is switched off, the switched off standard device is replaced by the newly subscribed standard device.

## 8 BaseSelect


BaseSelect enables quick and flexible switching between several DECT groups.

### NOTICE

Only standard devices (STANDARD profile or EXPERT profile with DECT role PP) can use the BaseSelect function.


Initial situation: User A has selected the base device of group 1.

**PROFILE** = required profile

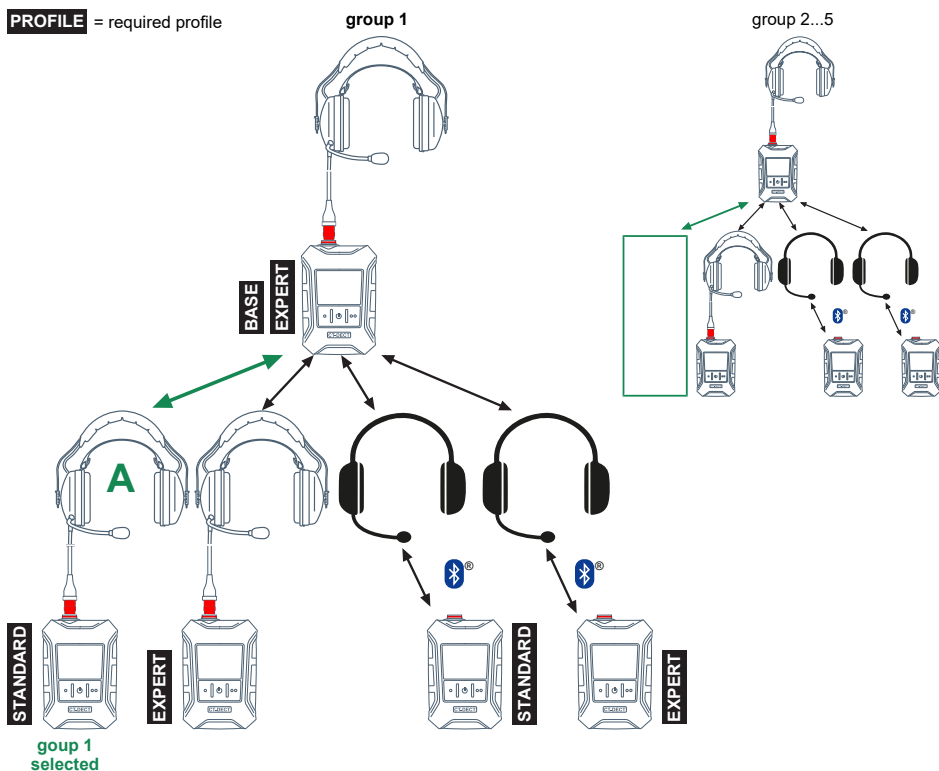

After group change: User A has selected the base device of group 2 and has thus switched to group 2.

**PROFILE** = required profile

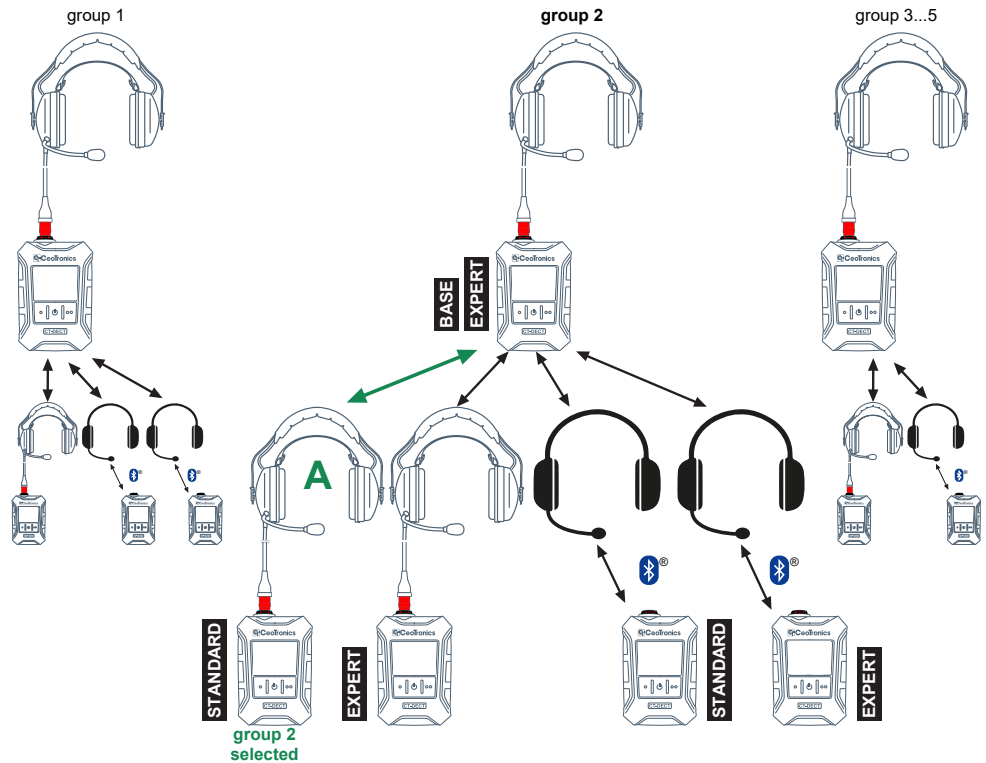

## BaseSelect - procedure

1. The user sets the number of base devices on their standard device (see Selecting the number of base devices [► 31])
2. The user subscribes his standard device once to the base devices of each target group (see Subscribing DECT [► 26]).
3. The user selects the base device of the target group on his standard device (see Selecting the base device [► 32]).


If you switch back to one of the other groups, it is no longer necessary to re-subscribe the base device to the target group.

It is also possible to return to the initial group without re-subscribing to the base device of the the group.

### 8.1 Selecting the number of base devices

If the CT-DECT Multi M7 is set as the standard device, it can be used with various base devices. To do this, it is necessary to select the number of base devices.

To do this, use the NUMBER OF BASE STATIONS menu item:

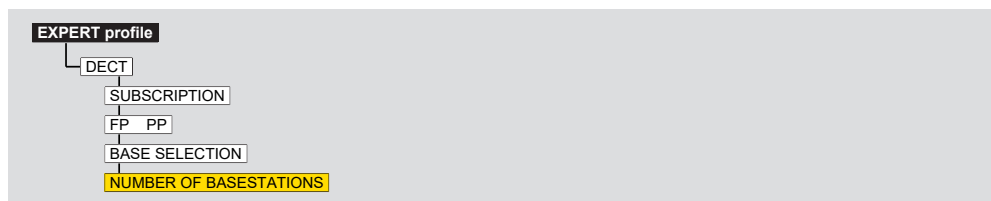


## 8.2 Selecting the base device

The base device can be selected either via the menu or a shortcut.

### 8.2.1 Selecting the base device via the menu

If the number of base devices in the CT-DECT Multi M7 is set to  $> 1$ , the base device to be used can be selected.

To do this, use the BASE SELECTION menu item:

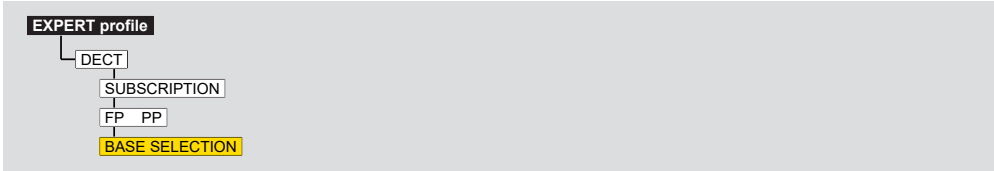

## NOTICE

The CT-DECT Multi M7 used as the standard device can only be used with one base device at a time.

### 8.2.2 Selecting the base device via shortcut

If the number of base devices in the CT-DECT Multi M7 is set to  $> 1$ , the base device to be used can be selected.


To do this, use the BASE shortcut.

## NOTICE

The BASE shortcut is only available when using a headset.


Call up the selection of the base device by pressing and holding the left button until BASE X appears on the display.



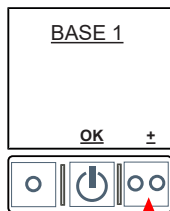


Voice output in the headset: BASE 1 active

Press

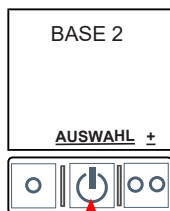

Voice output in the headset: BASE 2

Press

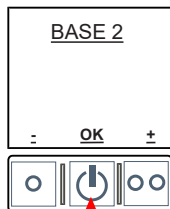

Voice output in the headset: done BASE 2 active

Press

## NOTICE

The CT-DECT Multi M7 used as the standard device can only be used with one base device at a time.


## 9 CT-WirelessPTT MIL

The CT-WirelessPTT MIL is a wireless operating unit that can be used for remote operation of the CT-DECT Multi M7.

### NOTICE

The CT-WirelessPTT MIL is not included in the scope of delivery of the CT-DECT Multi M7.

### 9.1 Controls

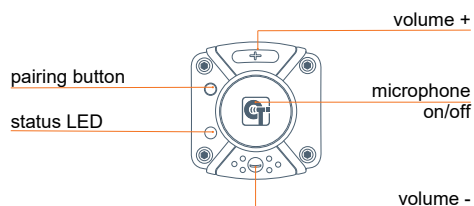


### NOTICE

Further information on the CT-WirelessPTT MIL can be found in the operating manual dok1790.


## 9.2 Switching on the WirelessPTT function

To prepare the connection with a CT-WirelessPTT MIL, the corresponding function must be switched on in the CT-DECT Multi M7.

To do this, use the WIRELESS PTT menu item:

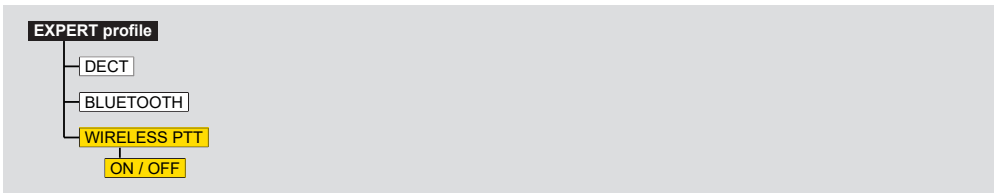


If there is no active connection to a WirelessPTT when the WirelessPTT function is activated, the WT symbol flashes on the display.

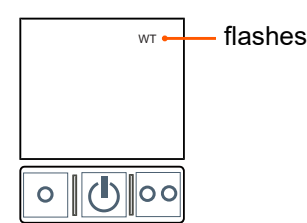

The WirelessPTT function can be switched off to disconnect the CT-DECT Multi M7 from the CT-WirelessPTT MIL without cancelling the pairing.

### 9.3 Pairing

To pair a CT-WirelessPTT MIL with a CT-DECT Multi M7 perform the steps quickly one after the other to avoid a timeout.

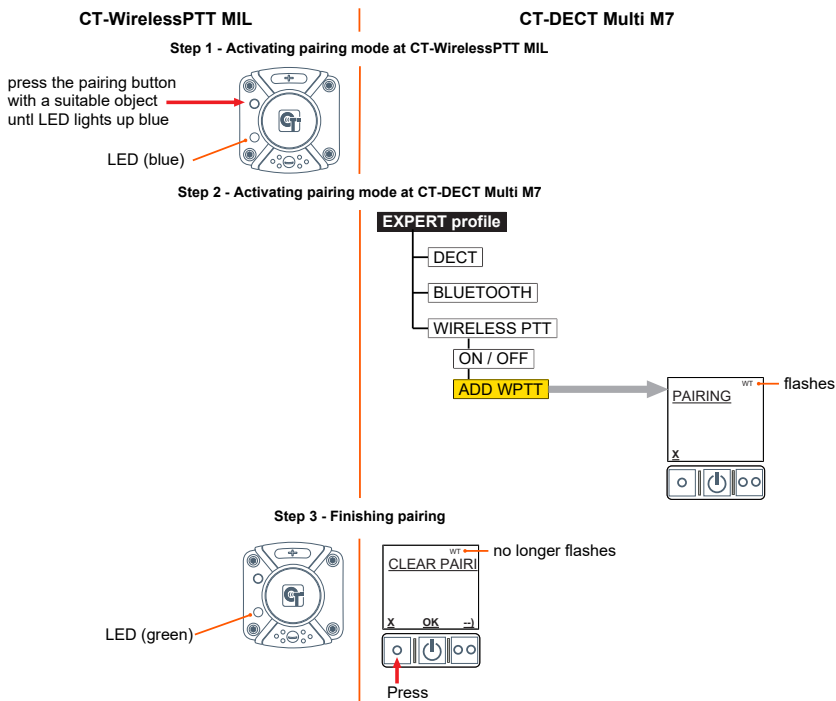


### 9.4 Delete pairings

You can delete all paired CT-WirelessPTT MIL from the memory of the CT-DECT Multi M7 via the menu.

This is helpful, for example, if several CT-WirelessPTTs have been mixed up or a CT-WirelessPTT has been lost.

To do this, use the CLEAR PAIRING menu item:

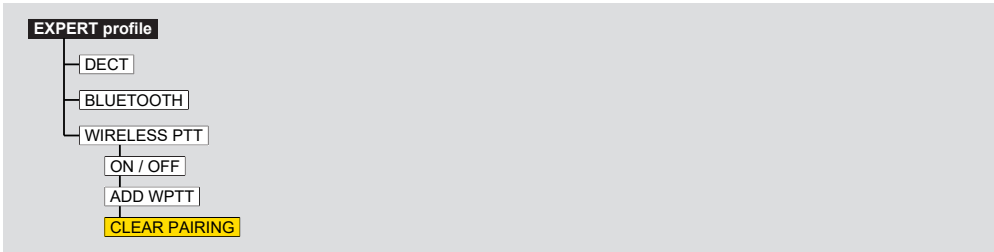

## 10 Bluetooth® connection

A mobile communication device such as a smartphone or tablet can be connected via the integrated Bluetooth® interface of the CT-DECT Multi M7 or a wireless headset (e.g. hearing protection headset with Bluetooth® function) can be used.

### NOTICE


Only one Bluetooth® audio connection can be established at a time. Either to a headset or to a communication device (e.g. smartphone).

If communication is established via the Bluetooth® device (e.g. a phone call via a smartphone), only the user of the CT-DECT Multi M7 with whom the Bluetooth® connection is established can make the phone call. In addition, this user listens to the communication from the DECT group. During the phone call, he cannot speak to the DECT group.

The other participants in the DECT group can neither hear the phone call nor speak into the phone call.

If required, a conference can be initiated and the other subscribers in the DECT group can be included in the call (see Initiating a conference call [► 42] )

You can find a more detailed explanation of the communication options in the following sections.

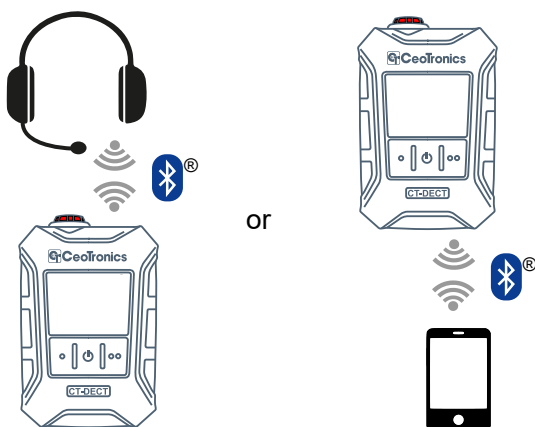


# 10.1 Selecting a Bluetooth® device type

In order for a Bluetooth® connection to be established, the appropriate device type must be set:

| Type of device | Examples                                      |
|----------------|-----------------------------------------------|
| PHONE          | smartphone, tablet, phone                     |
| HEADSET        | hearing protection headset, telephony headset |


You can set the device type via the CONNECTION PARTNER menu item:

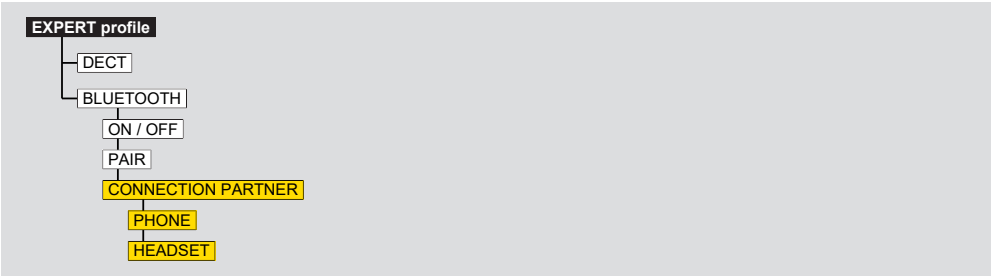

Default setting on delivery is PHONE.  
A change is retained even after a restart.

# 10.2 Connecting a Bluetooth® device (pairing)

Before a Bluetooth® device can be used in conjunction with a CT-DECT Multi M7, the devices must be paired.

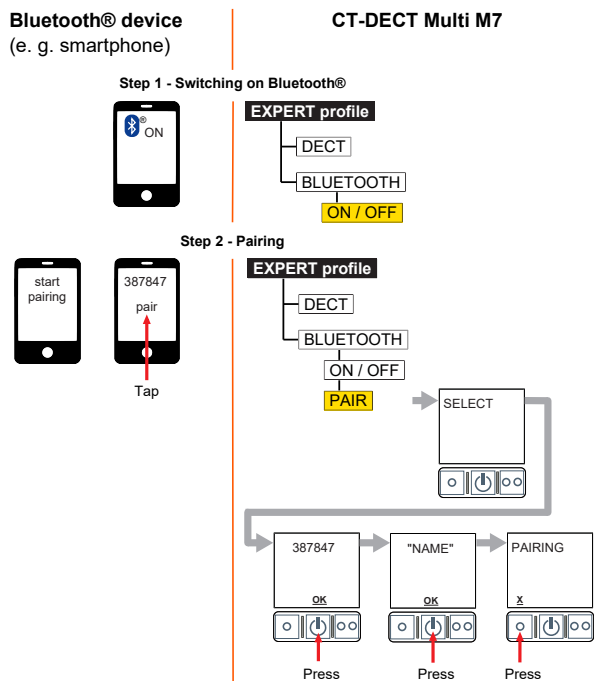

## NOTICE

For information on how to perform the pairing process with your Bluetooth® device, please refer to the manufacturer's user manual.


## 10.3 Phone call control

If a smartphone is connected via Bluetooth®, incoming calls can be accepted and rejected with the CT-DECT Multi M7 and existing calls can be ended.

Phone calls can also be accepted automatically as an option.


### 10.3.1 Answering an incoming call

When an incoming phone call is made, INCOMING CALL appears on the display of the CT-DECT Multi M7. You can then answer the call by pressing the respective button.

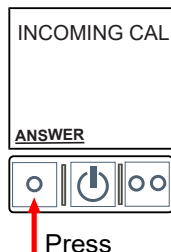


### 10.3.2 Rejecting an incoming call

If you do not wish to answer the incoming call, you can reject it by pressing the respective button.

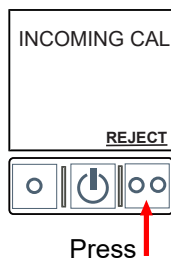

### 10.3.3 Ending an existing call


You can end an existing call via the menu.

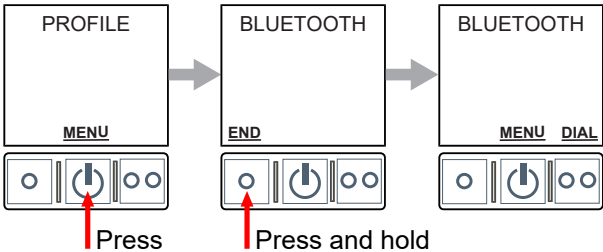

### 10.3.4 Activating automatic call acceptance

Incoming calls can be answered automatically if necessary. This feature is not active on delivery.


You can activate the function via the AUTO ACCEPT CALL menu item:

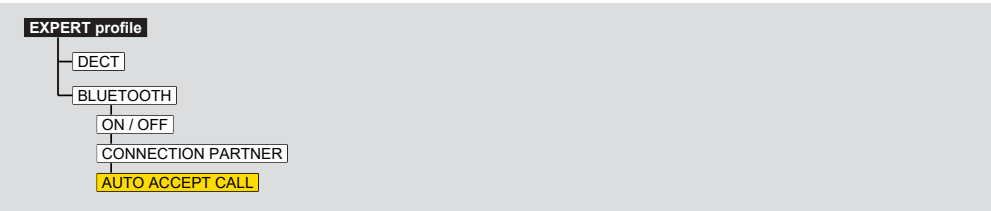

### 10.3.5 Initiating a conference call


Using the conference call function, an existing telephone call can be integrated into the DECT group. All users can communicate with each other in full duplex.

During an existing call, the shortcut 'D//B' appears on the CT-DECT Multi M7 display above the right button. You can then initiate the conference call by simply pressing the button.

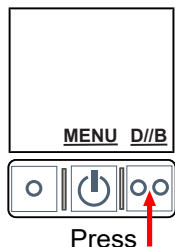

### 10.3.6 Ending a conference call

If a conference call is in progress, the shortcut 'D--B' appears on the CT-DECT Multi M7 display above the right button. You can end the conference call by simply pressing the button.

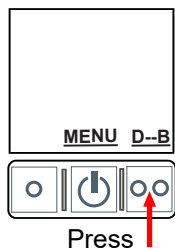

# 11 ASR-Control (Ambient Sound Reception)

If you have connected a compatible headset with external sound reception (ASR) **directly** via the accessory socket, you can operate the function via the CT-DECT Multi M7.


## 11.1 Compatible products

| Part no | Short code     | Description                                                                                 |
|---------|----------------|---------------------------------------------------------------------------------------------|
| 0290251 | CLIP-D-EMR-CLR | CT-ClipCom Digital, CT-ComLink® R plug connector, EarMike right side, with PPE approval     |
| 0290200 | CLIP-D-EMR-CLR | CT-ClipCom Digital, CT-ComLink® R plug connector, EarMike right side, without PPE approval  |
| 0290250 | CLIP-D-BML-CLR | CT-ClipCom Digital, CT-ComLink® R plug connector, BoomMike left side, with PPE approval     |
| 0290202 | CLIP-D-BML-CLR | CT-ClipCom Digital, CT-ComLink® R plug connector, BoomMike left side, without PPE approval  |
| 0909101 | TAC8-CLR       | 3M™ PELTOR™ ComTac™ VIII with CT-ComLink R plug connector (3M article number: MT14H418A-79) |

## 11.2 ASR in combination with CT-ClipCom Digital

Use the quick access menu of the CT-DECT Multi M7 to access the ASR function (see Quick access menu [► 22])

The intensity of the ASR function of the CT-ClipCom Digital can be regulated in four stages. Press the ASR button repeatedly to switch through the levels.

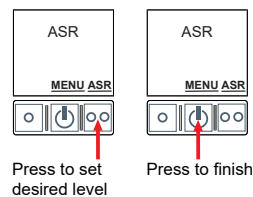

This is a ring circuit: stage 4 is followed by stage 1.  
The default setting is level 3 - ASR natural.

| Level   | Signalling sound | Feature       |
|---------|------------------|---------------|
| Level 1 | 1x long          | ASR off       |
| Level 2 | 1x short         | ASR muffled   |
| Level 3 | 2x short         | ASR natural   |
| Level 4 | 3x short         | ASR amplified |

### NOTICE

After each restart, the ASR intensity is reset to the default setting. A change to this setting is therefore not saved permanently.


### 11.3 ASR in combination with 3M™ PELTOR™ ComTac™ VIII

Use the quick access menu of the CT-DECT Multi M7 to access the ASR function (see Quick access menu [▶ 22])

The intensity of the ASR function of the 3M™ PELTOR™ ComTac™ VIII can be regulated in five stages. Press the A- or A+ button to switch through the levels.

#### NOTICE

In addition to the description in this manual, please also refer to the description of the ASR setting options in the operating manual of your 3M™ PELTOR™ ComTac™ VIII.

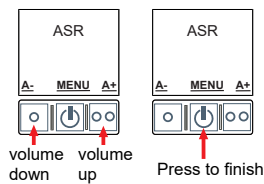

The default setting is level 1 - ASR off.

| Level   | Signalling sound | Feature       |
|---------|------------------|---------------|
| Level 1 | OFF              | ASR off       |
| Level 2 |                  | ASR muffled   |
| Level 3 |                  | ASR natural   |
| Level 4 |                  | ASR amplified |
| Level 5 | 1x short         | ASR max       |

#### NOTICE


After each restart, the ASR intensity is reset to the default setting. A change to this setting is therefore not saved permanently.

# 12 Sidetone (S/T)

Sidetone is a desirable audible feedback of your own voice that headset users hear when they speak into their microphone. Their own voice is reproduced by their own headset speakers.

You can set the intensity of the Sidetone in the CT-DECT Multi M7 menu in 6 levels or switch it off.

To do this, use the S/T menu item:

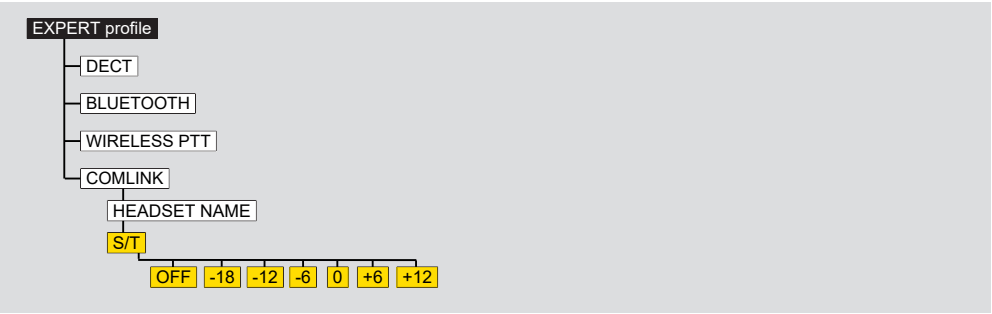

The default setting is 0.  
A change is retained even after restart.

## 13 DNR

DNR refers to a function for digital noise reduction.

It only affects the microphone of a headset connected via the accessory socket.

You can set the intensity of the DNR function in 5 levels (-20 to OFF).

To do this, use the DNR menu item:



The default setting is -15.

A change is retained even after restart.

# 14 MonoMix

The CT-MonoMix function allows you to mix or split the audio output to the left and right ear. It is available when a stereo-capable headset is connected.

Use the MONOMIX menu item to make settings:




The default setting is AUTOMATIC.

A change will remain in effect even after a restart.


The following illustrations explain the effect of the individual MonoMix settings:

## AUTOMATIC

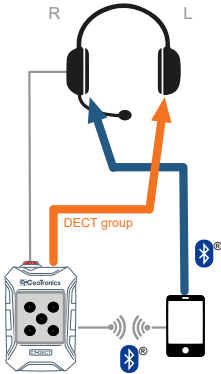

DECT connection and Bluetooth® connection active

- incoming calls from the DECT group are played back on the left earpiece.
- incoming calls from a Bluetooth® connection are played back on the right earpiece.

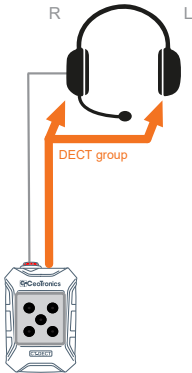

DECT connection active


- incoming calls from the DECT group are played back on both earpieces.



Bluetooth® connection active

- incoming calls from a Bluetooth® connection are played back on both earpieces.

## OFF

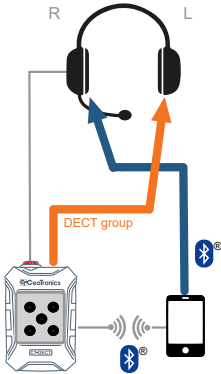


DECT connection and Bluetooth® connection active

- incoming calls from the DECT group are played back on the left earpiece.
- incoming calls from a Bluetooth® connection are played back on the right earpiece.



DECT connection active


- incoming calls from the DECT group are played back on the left earpiece.

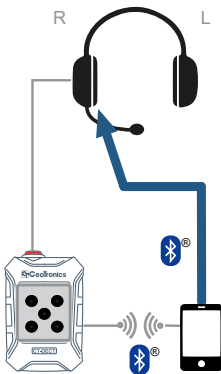

Bluetooth® connection active

- incoming calls from a Bluetooth® connection are played back on the right earpiece.


## ON

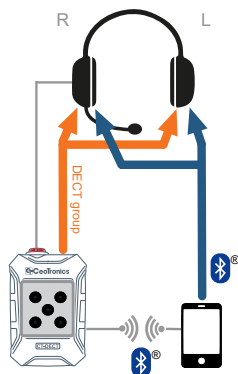

When set to ON, all sources (DECT group and Bluetooth® connection) are played back on both earpieces of the headset. It does not matter whether only one source or several sources are active.

# 15 LED indication

There is a status LED on top of the CT-DECT Multi M7.

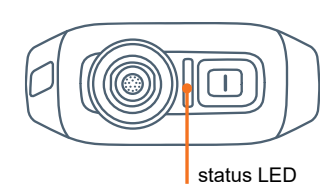

The desired function of the status LED can be selected from 3 modes:

| Mode          | Function                                                                                                                                                      |
|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| BATTERY STATE | The status LED uses different colours and flashing sequences to indicate the current battery status (see Visual battery status indicator (status LED) [► 59]. |
| MIC           | The status LED uses different colours to indicate the current microphone status (see Visual microphone status indicator (status LED) [► 17].                  |
| OFF           | The status LED is deactivated.                                                                                                                                |

To do this, use the LED INDICATION menu item:



The default setting is BATTERY STATE.  
A change is retained even after restart.


## 16 SIG - Signalling

The CT-DECT Multi M7 generates various audio signals and voice outputs to inform the user about various events (e.g. battery status) or as a confirmation of a user input (e.g. MIC ON or OFF).

The ratio of the volume of this sound signalling and voice output to normal communication with other participants can be set by the user.

A change is applied immediately and confirmed to the user by short beeps.

To set the signalling, use the SIG menu item:

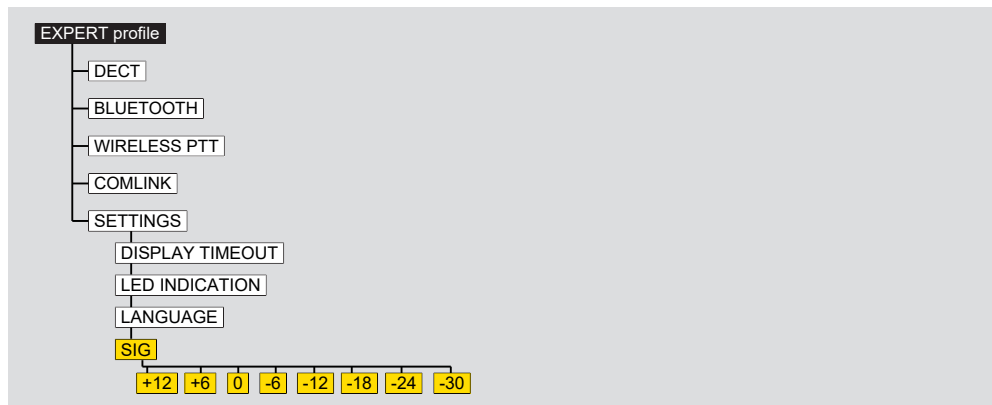


The default setting is 0dB.

A change is retained even after restart.

## 17 Internal power supply


Power is supplied by VARTA EasyPacks XL (LiPo).

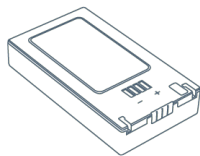

Alternatively, a special AAA adapter filled with three AAA cells can be inserted into the device.

### 17.1 Using AAA adapters

Instead of a battery pack, special AAA adapter filled with three AAA cells can be inserted into the device.

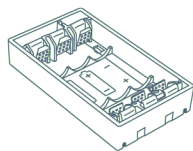

NiMH batteries or alkaline batteries can be used in the AAA adapters. The use of NiMH batteries is recommended.

The runtime depends to a large extent on the types of battery used.

The runtime depends to a large extent on the types of battery used:

- 3 AAA LR03 1.5V alkaline batteries
- 3 AAA HR03 1.2V NiMH batteries



## WARNING

Batteries and rechargeable batteries must not be mixed in the AAA adapters. Mixing batteries and rechargeable batteries can result in damage to the device.


## NOTICE

Batteries and rechargeable batteries must not be mixed in the AAA adapters. Mixing batteries and rechargeable batteries can result in damage to the device.

### Setting the type of battery

For an accurate calculation of the battery level, the device must know the type of battery used in the AAA adapters.

To set the battery type, use the BATTERY menu item:

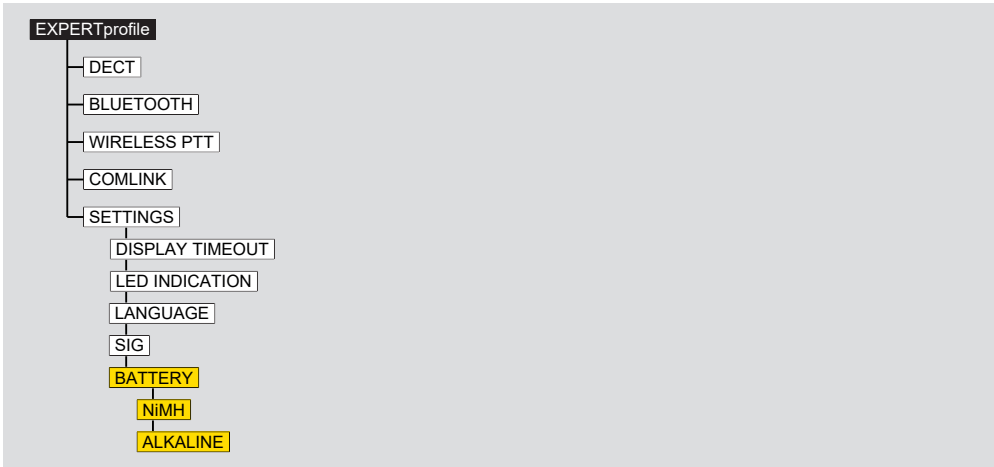

A change is retained even after a restart.

## 17.2 Changing the batteries / AAA adapters

### 1. Open the battery compartment


Open the battery compartment by turning the locks clockwise.



### 2. Change the batteries / AAA adapter

Remove the battery / AAA adapter from the battery department. When reinserting, make sure the electrical contacts of the batteries/battery adapters align with the contacts in the battery compartment.

electrical contacts of battery /  
AAA adapter

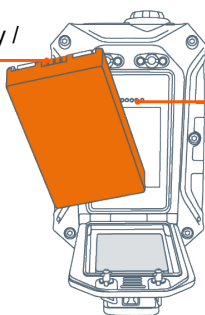

contacts in  
battery compartment

### 17.3 Runtime

The runtime of the CT-DECT Multi M7 may vary depending on:

- the actual ambient temperature
- the number of connected participants
- the use of the accessory socket
- the intensity of use (transmitting / receiving / standby)

The runtimes in the following table serve only as a rough guide.

#### Runtimes of the CT-DECT Multi M7 at 20°C


| VARTA EasyPack XL | AAA NiMH-Akku<br>Panasonic Eneloop Pro BK-4HCDE<br>(930mAh) |
|-------------------|-------------------------------------------------------------|
| up to 16 hours    | up to 8 hours                                               |

Runtimes are shorter at lower temperatures. For example, a 10 % drop can be expected at 0 °C compared to 20 °C.

If rechargeable batteries/batteries with different filling levels are used, the runtime may also be shortened.

## 17.4 Battery level monitoring

Battery levels can be monitored on the display. Simplified icons can be seen permanently at the top of the display.

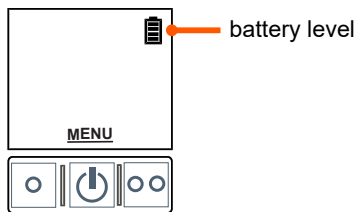

The exact remaining capacity can be called up in the menu.

The battery level calculations are calibrated to the following items:

| Description                         | Short code   | Part no |
|-------------------------------------|--------------|---------|
| VARTA EasyPack XL LiPo battery pack | AKKU-VARTAEP | 4024006 |
| Panasonic eneloop AAA-NiMH battery  | AKKU-AAA-ELP | 4006504 |

The use of other types may lead to different results.

### 17.5 Visual battery status indicator (status LED)

The status LED visually indicates the remaining battery capacity. The assigned values only indicate the estimated remaining battery capacity. They cannot be converted to the remaining runtime without further ado, as this depends considerably on the usage scenario. If the LED flashes red, replace the battery pack/batteries.

|  status LED | Status LED                  | Residual capacity  |
|---------------------------------------------------------------------------------------------|-----------------------------|--------------------|
|                                                                                             | green                       | approx. 34 – 100 % |
|                                                                                             | yellow                      | approx. 10 – 33 %  |
|                                                                                             | red                         | approx. 5 – 9 %    |
|                                                                                             | flashing red (2 sec cycle)  | approx. < 5 %      |
|                                                                                             | flashing red (200 ms cycle) | shutdown imminent  |

### NOTICE

Batteries and rechargeable batteries must not be mixed in the AAA adapters. Mixing batteries and rechargeable batteries can result in damage to the device.


### 17.6 Acoustic battery warning

When the battery is low, the CT-DECT Multi M7 emits acoustic warnings. These are tones and voice announcements.

| State of charge | Acoustic signal / voice announcement                                | Repetition cycle |
|-----------------|---------------------------------------------------------------------|------------------|
| 0%              | BEEP-BEEP – internal battery state<br>– replace battery immediately | 30 sec.          |
| undervoltage    | BEEP-BEEP – internal battery state<br>– replace battery immediately | 10 sec.          |

### 17.7 Automatic shutdown in case of undervoltage

To prevent uncontrolled switch-off, the device shuts down automatically if the battery voltage is too low. This switch-off is indicated by the scrolling text UNDERVOLTAGE and a countdown in the display.

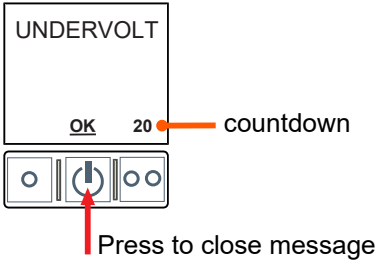

## 18 Accessories

| Description                                 | Abbreviated designation | Item number |
|---------------------------------------------|-------------------------|-------------|
| CT-WirelessPTT MIL, raised button           | WLPTT-MIL-24-E          | 4008034     |
| CT-WirelessPTT MIL, flat button             | WLPTT-MIL-24-F          | 4008035     |
| CT-WirelessPTT MIL, flat, low-noise button  | WLPTT-MIL-24-FS         | 4008033     |
| Bag, black, for MOLLE systems               | TASCHE-MULTIM7          | 4035141C    |
| Bag, camouflage, for MOLLE systems          | TASCHE-MULTIM7          | 4035141-NSN |
| Orange bag with shoulder strap              | TASCHE-MULTIM7          | 4035150     |
| VARTA EasyPack XL                           | AKKU-VARTAEP            | 4024006     |
| Single charging unit for VARTA EasyPack XL  | LADE-VARTAEP1           | 4024008C    |
| 4-way battery charger for VARTA EasyPack XL | LADE-VARTAEP4           | 4024004     |
| AAA adapter for three AAA cells             | BATADAP3-AAA            | 4024005     |

## 19 Maintenance and care

### 19.1 Inspecting devices

Inspect your CEOTRONICS devices, especially cables and connectors, regularly for any damage or wear and have them repaired if necessary.

### 19.2 Cleaning


Clean your CEOTRONICS device with a suitable cloth moistened with clean water. If necessary, use a mild-soap solution, e.g. washing up liquid, or the following cleaning agents:

- Sterillium® classic pure
- Sterillium® med
- Bacillol® plus


Clean the contacts of the plug connectors with a commercially available contact cleaning agent.

# 20 Labelling

## Outside

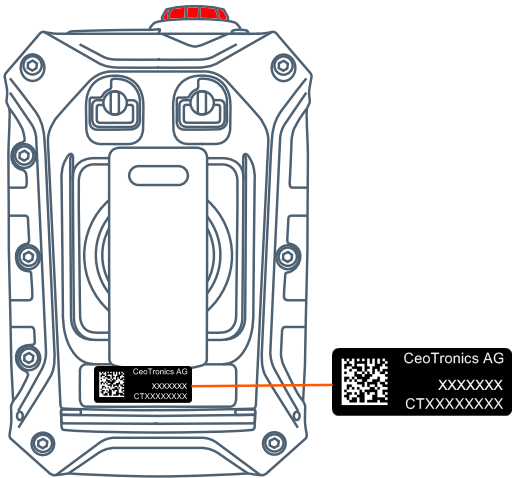

## Inside

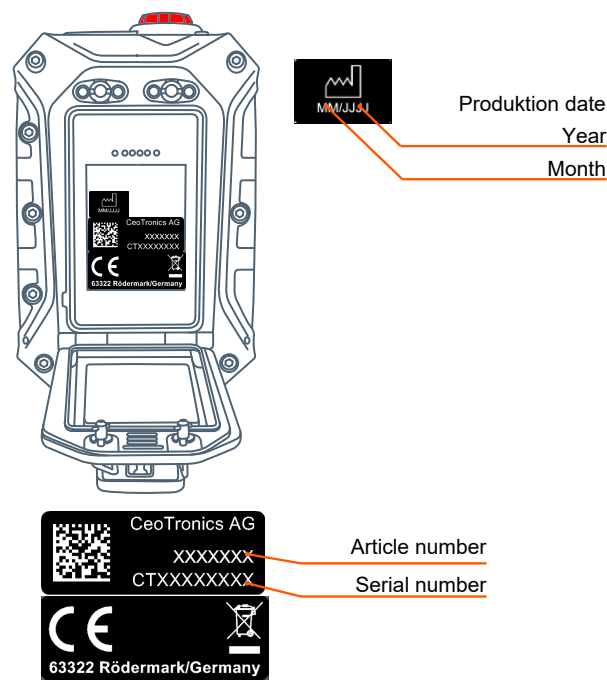

## 21 Abbreviations and terms

| Abbreviation/term | Explanation                                                                          |
|-------------------|--------------------------------------------------------------------------------------|
| AAA               | Battery and rechargeable battery size micro                                          |
| ASR               | Ambient Sound Reception                                                              |
| BT                | Bluetooth®                                                                           |
| CLR               | CT-ComLink® R<br>R = red<br>is usually used to connect a headset                     |
| FP                | Fixed Part – DECT base device on which mobile DECT participants (PP) can subscribe.  |
| LiPo              | Lithium polymer                                                                      |
| NiMH              | Nickel metal hydride                                                                 |
| PP                | Portable Part - mobile DECT participant that can subscribe on DECT base devices (FP) |
| PTT               | Push-to-Talk                                                                         |
| S/N               | Serial number                                                                        |

# Notes

# Notes

# Notes



## **CEOTRONICS AG**

Adam-Opel-Str. 6  
63322 Rödermark (Deutschland)

Tel: +49 6074 8751-0

Fax: +49 6074 8751-676-265

E-Mail [verkauf@ceotronics.com](mailto:verkauf@ceotronics.com)