


CT-WirelessPTT MIL

Quick guide

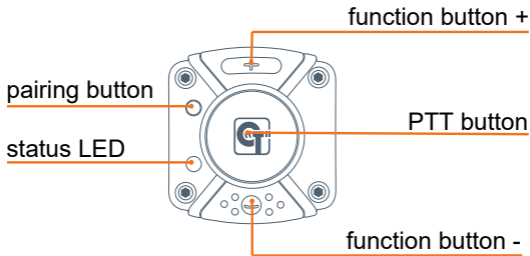

Pairing

- 1 Place the CT-WirelessPTT MIL close to the other device (< 50 cm).
- 2 Press the pairing button until the LED turns **blue**.
- 3 Start the pairing process on the other device. The LED flashes **blue** during the procedure.
- 4 The pairing is successful if the LED turns **green**.

If an error occurs, the LED turns **red**. In this case repeat the pairing process.

Battery Level

The battery level can be shown by the following procedure:

- by pressing the function buttons „+“ and „-“ at the same time in disconnected state
- after changing the battery
- by querying the battery level in the paired device

The indication is as follows:

LED	Battery capacity*
• green permanent	95% – 100%
• green flashing	20% – 90%
• yellow flashing	10% – 20%
• red flashing	0% – 10%

* The percentage values only indicate the estimated battery capacity. A conversion to the remaining battery life is not possible without further ado.

When the LED starts flashing red it is recommended to change the battery.

The recommended type of battery for optimal use with the CT-WirelessPTT is CR2032.

CeoTronics part number: 4008014