

EN

Arm holder for CT-Wireless PTT MIL

Product instructions

Contents

1	Application.....	4
1.1	Before use	4
1.2	Inserting and removing the CT-Wireless PTT MIL	5
2	Maintenance and care.....	6
2.1	Inspecting devices.....	6
2.2	Cleaning.....	6





1 Application

The armband holder is designed for mounting CT-Wireless PTT MIL on your arm. It is available for use with one or two CT-Wireless PTT MIL. The instructions below refer to the model for mounting two CT-Wireless PTT MIL as an example. The handling is identical.


1.1 Before use

The holder must be adjusted to the size of your arm before use.


Condition on delivery



Adjust the armband strap as required.

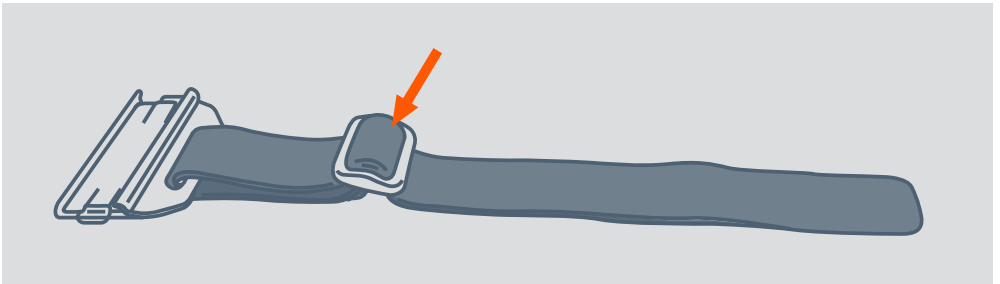


Guide the end of the Velcro strap through the holder and adjust to the correct size.

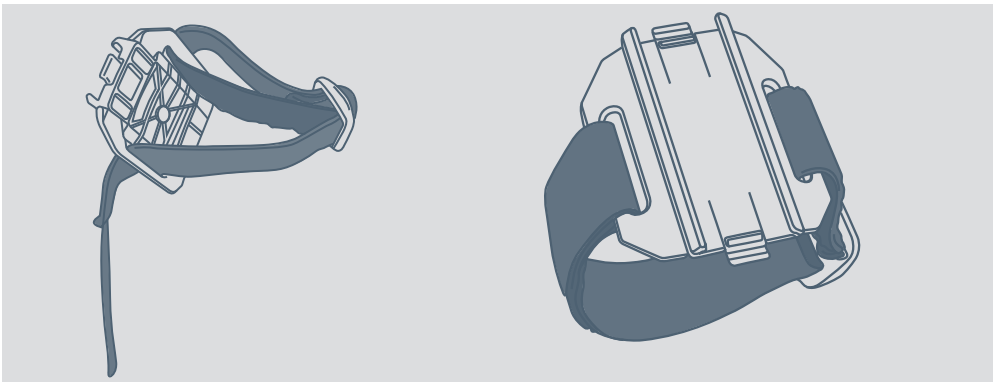


1.2 Inserting and removing the CT-Wireless PTT MIL

Slide the CT-Wireless PTT MIL into the holder until it clicks into place. It may be stiff to insert and remove the CT-Wireless PTT.

This is intentional in order to ensure that the CT-Wireless PTT sits securely in the armband holder under all operating conditions.

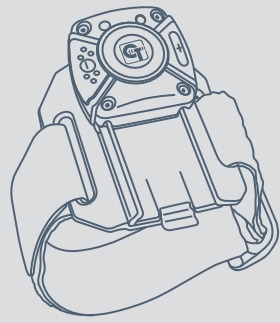

If using two CT-Wireless PTT MIL, also slide the second device into the holder. To remove, push the locking mechanism (arrow) downwards and slide the CT-Wireless PTT MIL out of the holder.

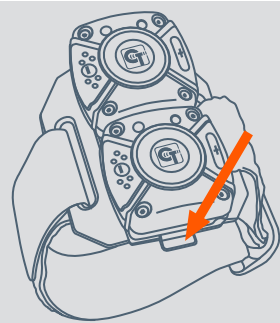

2 Maintenance and care

2.1 Inspecting devices

Routinely inspect your CeoTronics device for damage and wear and have them repaired, if necessary.

2.2 Cleaning

Clean your CeoTronics device with a suitable cloth moistened with clean water. If necessary, you can also use a mild soap solution, e.g. in the form of a hand dishwashing detergent or the following cleaning agents:

- Sterillium® classic pure
- Sterillium® med
- Bacillo® plus



Notes



CeoTronics AG

Audio · Video · Data Communication

Adam-Opel-Str. 6
63322 Rödermark (Deutschland)

Tel: +49 6074 8751-0
Fax: +49 6074 8751-676-265
E-Mail verkauf@ceotronics.com

