

EN

CT-WirelessPTT MIL

Bluetooth® LE

Product instructions



Contents

1	Safety notices.....	4
2	General	5
2.1	Mounting options.....	5
2.2	Identification	6
2.3	Pairing.....	7
3	Power supply and operating time.....	8
3.1	Displaying the battery capacity	8
3.2	Changing the battery.....	9
4	Maintenance and care.....	10
4.1	Inspecting devices.....	10
4.2	Cleaning.....	10
5	Accessories.....	11





1 Safety notices

DANGER

Immediate hazardous situation. Results in death or serious injury.

WARNING

Potentially hazardous situation. May result in death or serious injury.

CAUTION

Potentially hazardous situation with minor or moderate injury.


NOTICE

Indicates a situation that, if not avoided, may cause damage to the product or other property. Used to indicate useful information for efficient and safe use of the product.

2 General

A CT-WirelessPTT MIL is a remote operating unit used to activate and/or control certain CeoTronics products. It can be held and used by hand.

It's functions depend on the receiving device to which the CT-WirelessPTT MIL is connected.

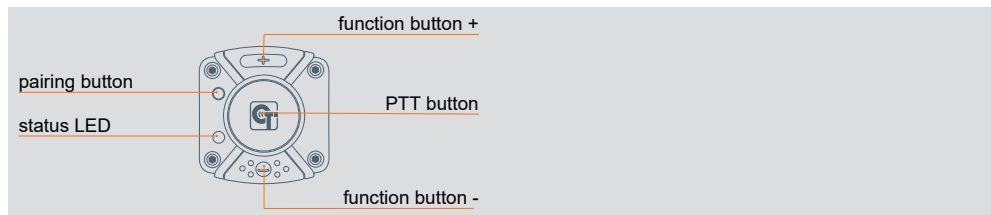




NOTICE

For uninterrupted operation of the CT-WirelessPTT MIL receiver, ensure that the receiver housing is not in the immediate vicinity of the transmitting antenna of a radio device or mobile phone. Interference of the CT-WirelessPTT MIL radio signal by a comparatively strong transmission signal of a radio or mobile phone can impair the sensitivity of the CT-WirelessPTT MIL receiver. This can interrupt the connection!



2.1 Mounting options

Mounting options for one and two CT-WirelessPTT MIL devices are available as a wrist strap mount and a Picatinny rail adapter.

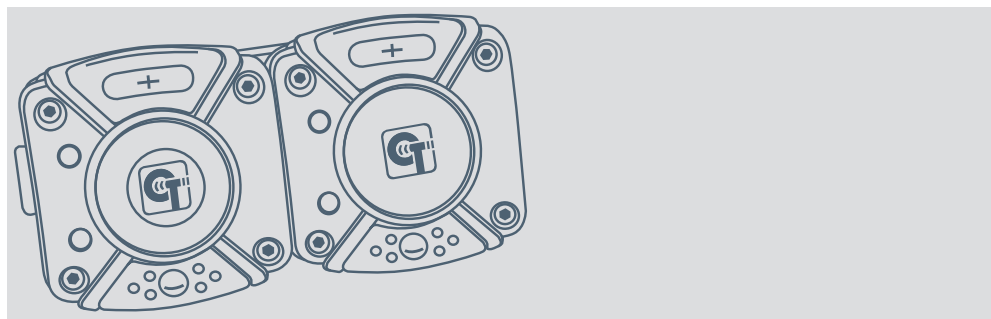

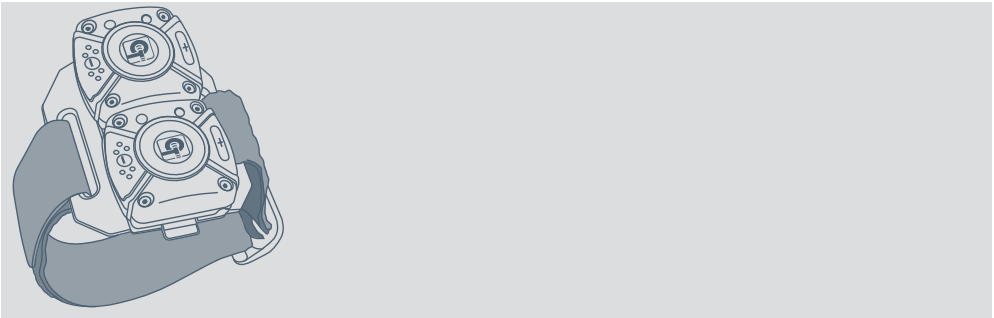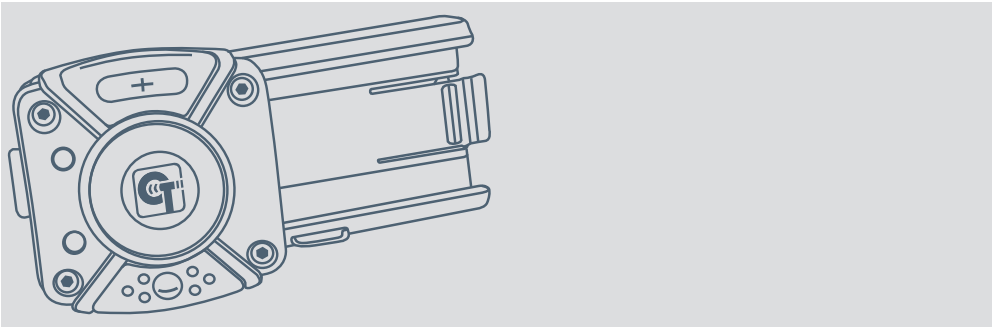

2.2 Identification

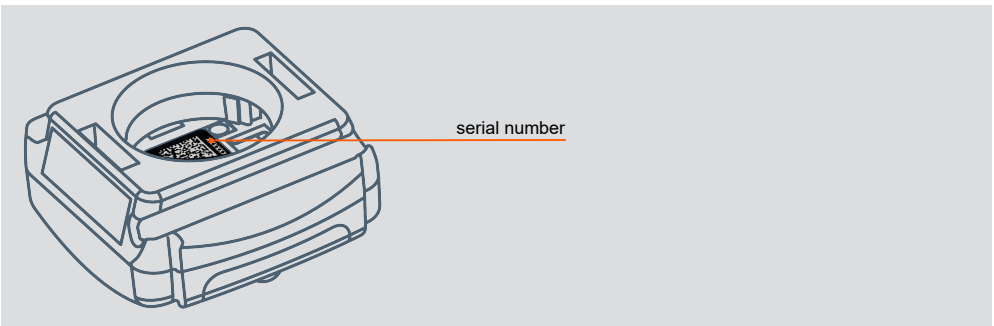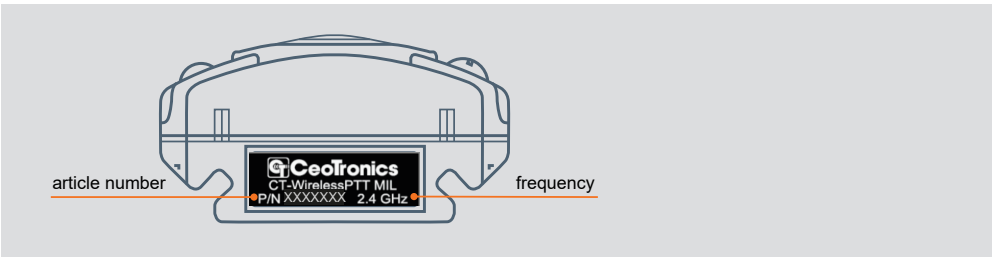

2.3 Pairing

The CT-WirelessPTT MIL can only be paired with one device at a time.

The following steps are required to pair the CT-WirelessPTT MIL with another device:

1. Start the pairing process on the other device.
2. Move the CT-WirelessPTT MIL close to the other device to speed up pairing.
3. Press and hold the pairing button on the CT-WirelessPTT MIL until the status LED is blue.

Progress in the pairing process is indicated by a flashing blue LED. Confirmation may be required on the other device during pairing.

A green LED indicates that the devices are successfully paired. The LED goes out after a set time – the CT-WirelessPTT MIL is ready to use. If pairing fails, the LED lights up red. In this case, repeat the pairing process and delete any saved pairings in the other device.



3 Power supply and operating time

Power is supplied by a commercially available 3V battery (type CR2032) in the battery compartment of the device.

We recommend using a battery with a capacity of at least 210mAh.





With this type of battery, operating times of up to 6 months can be achieved, depending on the ambient temperature and the intensity of use.

Operating times may vary when using other battery types.

3.1 Displaying the battery capacity

The LED can show the battery capacity. The battery level can be indicated as follows:

- by pressing the function buttons “+” and “-” at the same time, when not paired to a device
- after changing the battery
- by querying the battery level in the paired device

LED	Battery capacity*
	95%-100%
	20%-90%
	10%-20%
	0%-10%

* The percentage values only indicate the estimated battery capacity. It is not possible to calculate the remaining run-time.



If the LED flashes red, we recommend changing the battery.

3.2 Changing the battery

CAUTION

Equipment damage! Ensure the correct polarity!

Open the cover – change battery – check correct positioning

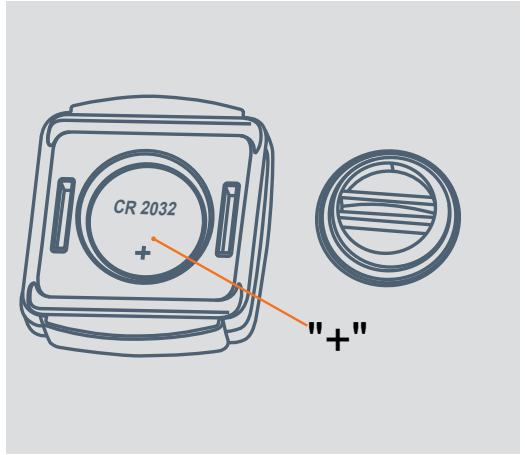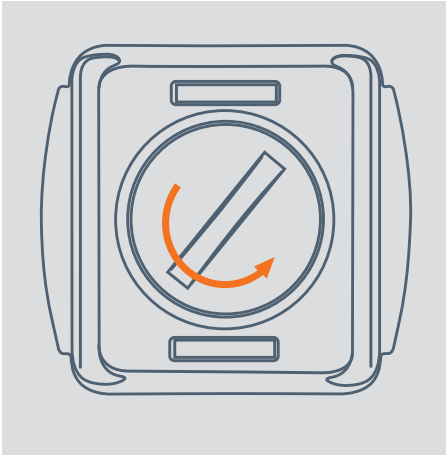

4 Maintenance and care

4.1 Inspecting devices

Routinely inspect your CeoTronics device for damage and wear and have them repaired, if necessary.

4.2 Cleaning

Do not use alcohol or other solvents for cleaning. Clean the device with a suitable cloth moistened with clean water. If necessary, use a mild-soap solution, e.g. washing up liquid. Only use alcohol-free disinfectants. Clean the contacts of connectors with a standard contact cleaning agent.



5 Accessories

Description	Part no
Wrist strap with mount for two CT-WirelessPTT MIL	4008090
Wrist strap with mount for one CT-WirelessPTT MIL	4008098
Picatinny mount for two CT-WirelessPTT MIL	4008095
Picatinny mount for one CT-WirelessPTT MIL	4008102



CeoTronics AG

Audio · Video · Data Communication

Adam-Opel-Str. 6
63322 Rödermark (Deutschland)

Tel: +49 6074 8751-0
Fax: +49 6074 8751-676-265
E-Mail verkauf@ceotronics.com

